



## Seats

### ■ Adjusting seat position

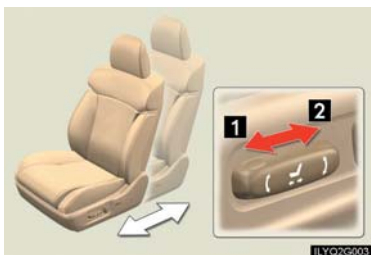

- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle

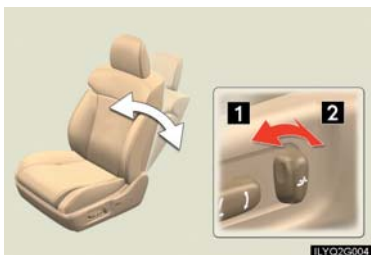


- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support

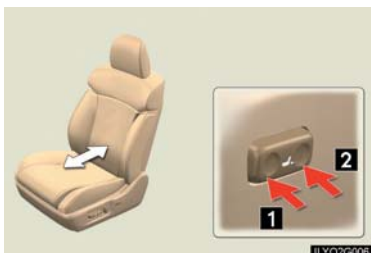

- 1 Firmer
- 2 Softer

## Driving and Seat Position Memory System (If Equipped)

The seats can be returned to a previously set position by simply pressing a button.

The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat.

Positions can be conveniently stored for the vehicle's primary drivers and passengers.

### Setting memory positions



While holding down the SET button, press and hold one of the memory buttons (1, 2, or 3) until you hear a beep.

The current position of the driver's or front passenger's seat, the outside rear view mirror and the steering wheel (driver's side only) are stored.



### Recalling memory positions



Press one of the memory buttons (1, 2, or 3).

### Linking driving position memory with door unlock operation (driver's seat only)




While holding down the desired memory button, press and hold either the  or  button on the wireless remote control until you hear a beep.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)


## Head Restraints

### Driver's seat

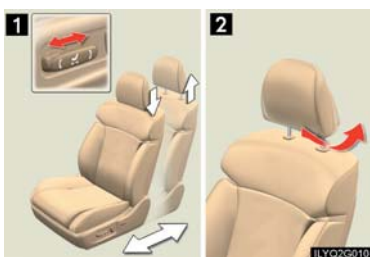

- 1 Height adjustment: head restraint height can be adjusted automatically along with the seat position adjustment. (→ P.11)
- 2 Horizontal adjustment: grip head restraint and twist to tilt forward or backward.

### Front and rear passenger's seat

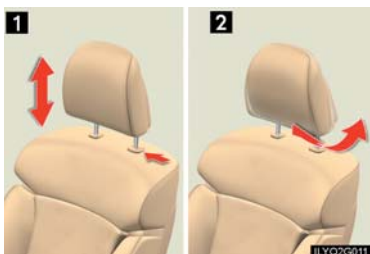

- 1 Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.
- 2 Horizontal adjustment (Except rear center seat): grip head restraint and twist to tilt forward or backward.

## Seatbelts

### Adjusting shoulder belt height (front seats only)



**To raise:** pull the anchor upward.

**To lower:** depress the button and push the anchor down.

### Seatbelt comfort guides (outboard rear seats only)



If the shoulder belt fits close to the neck, slide the comfort guide forward.

## Outside Rear View Mirrors

### ■ Adjusting the mirrors



**1** To select the mirror you wish to adjust (L or R), use the select switch.

**2** To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the select switch in the neutral position (neither L nor R selected).

### ■ Folding the mirrors



To fold the mirrors back, press the button. Press the button again to return them to the extended position.

## Inside Rear View Mirror


The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn AUTO mode ON/OFF, press the AUTO button.

The indicator comes on when AUTO mode is turned ON.

## Steering Wheel

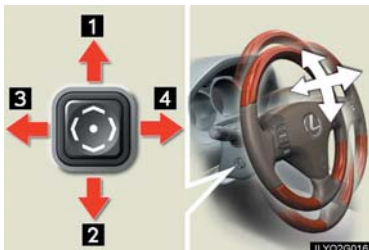

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the engine switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the engine switch is switched to ACC or IG-ON mode.

## Odometer/Trip Meter and Trip Meter Reset Buttons



- 1 Changes the display.
- 2 Resets the trip meter driving range to 0.